



# **Grapppler<sup>®</sup> 9 Pin**

**Parallel Printer Interface**

**USER'S GUIDE**



## **WARNINGS**

Orange Micro Inc. reserves all rights in the software incorporated in PROM or EPROM in the Grappler 9 Pin and in the Users Manual. Any infringement of those copyrights will be prosecuted to the fullest extent allowed by the law.

## **HINWEIS**

Orange Micro Inc. reserviert alle Rechte hinsichtlich in der PROM oder EPROM in der Grappler 9 Pin und der Gebrauchsanweisung erwahnten Software. Verstoesse gegen die copyrights jeglicher Art werden gerichtlich verfolgt unter vollster Ausschopfung des andwendvaren Gesetzes.

## **AVIS**

Orange Micro Inc. se reserve tous droits du programme controlant les differentes operations du PROM ou EPROM du Grappler 9 Pin ainsi que celles decrites dans le manuel d'utilisation du systeme. Tout violateur de ces copyright sera poursuivi dans toute la mesure fixee par la loi.

## **AVISO**

Orange Micro Inc. se reservatodos los derechos de programacion incorporada en el PROM o EPROM en el Grappler 9 Pin y en el Manual de Instruccion. Laviolacion de estos derechos de copia ocasionara la mayor prosecucion permitida por la ley.

## **Trademarks**

Macintosh, ImageWriter, Apple, Apple IIc, Apple IGS and Apple IIc+ are trademarks of Apple Computer Inc. Grappler is a trademark of Orange Micro Inc. Microsoft Word and Excel are trademarks of Microsoft Inc.

# **Grappler 9 Pin**

## **Parallel Printer Interface**

### **User's Manual**

---

#### **TABLE OF CONTENTS**

##### **GETTING STARTED**

Introduction	2
What's In The Package	2
Installing The Grappler 9 Pin	2
How To Use The Grappler 9 Pin	3
Step 1: Getting To Know Your Software	4
Step 2: Installing The Right Printer	4
Step 3: Setting The Grappler DIP Switch	5
Apple IIGS and Apple IIc Installation Tests	6
Macintosh Installation Tests	7
Installation Double-Checks	8

<b>TROUBLESHOOTING - GRAPPLER 9 PIN</b>	<b>8</b>
---	----------

<b>DAISY WHEEL PRINTERS ON A MAC</b>	<b>9</b>
--------------------------------------	----------

<b>512K MAC TO GRAPPLER CABLE</b>	<b>10</b>
-----------------------------------	-----------

<b>RADIO FREQUENCY INTERFERENCE</b>	<b>11</b>
-------------------------------------	-----------

<b>LIMITED WARRANTY</b>	<b>12</b>
-------------------------	-----------

## GETTING STARTED

### INTRODUCTION

In the world of computers and printers, information can be sent or received in two forms: serial or parallel. Information that is sent serially is like a railroad train: each message is a single car that arrives separately as it comes down the track.

On the other hand, imagine an eight lane super highway with eight cars traveling side by side, and all arriving simultaneously. This is how parallel information travels.

Normally, the Apple IIc, IIc+, and IIGS and Macintosh computers send out serial information, expecting a serial printer. The Grappler 9 Pin is a unique printer cable that actually converts information from serial to parallel. This conversion allows you to connect your Apple to a parallel printer instead of an ImageWriter, thus increasing the number of printer choices available to you.

### WHAT'S IN THE PACKAGE:


You should receive with your Grappler 9 Pin, in addition to this manual.

1. One Grappler 9 Pin Unit
2. One Power Supply
3. One Apple IIc Adapter Cable


### INSTALLING THE GRAPPLER 9 PIN


Use these instructions to hook up the Grappler 9 Pin

1. TURN OFF POWER TO THE APPLE (MAC) AND TO YOUR PRINTER.
2. Observe the illustration below and make note of four items: (A) printer connector; (B) computer cable; (C) wall transformer and cable; and (D) DIP switch.

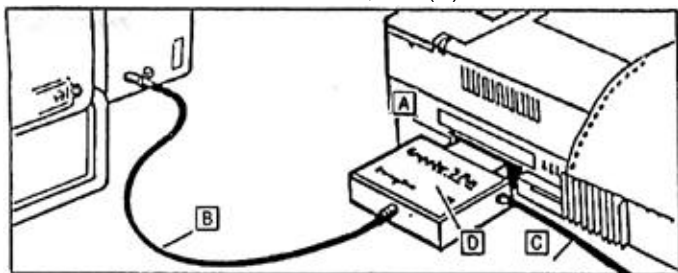

3. With the power to all units off, plug the Grappler 9 Pin printer connector into your parallel printer port. Refer to your printer users guide for the location of this port and any specific printer instructions.
4. Locate the computer cable and insert this into the back of the Apple where the small printer symbol is found. See Apple manual for details.
5. Plug the wall transformer into a standard electrical outlet and into the Grappler 9 Pin.
6. **Apple IIc only:** If you have altered the baud rate in the PIN assignment for the printer port, this must be reset. Reset to 9600 baud, 8 data bits, 1 stop bit and no parity (default PIN value: 166/1124) prior to using the Grappler 9 Pin. See your Apple IIc manual for details.

**Apple IIGS only:** Press **Control--ESC** to enter the Classic Desk Accessory menu. Under CONTROL PANEL, the PRINTER PORT must be set for 9600 baud, 8 data bits, 1 stop bit and no parity to operate correctly. Unless you have previously changed these settings, they will be correct from the factory. Under SLOTS, be sure that SLOT#1 is set for PRINTER PORT and not YOUR CARD

**Macintosh only:** The ImageWriter driver in the Macintosh system folder will communicate correctly with the Grappler at 9600 baud. Be sure that ImageWriter is selected in the CHOOSER under the  menu, and that AppleTalk is DISCONNECTED if you are using the printer serial port (indicated by a picture of a printer on the Mac case).

- 7 Follow the instructions under "How to Use the Grappler 9 Pin," then set the Grappler 9 Pin DIP switch.  
**WARNING:** Use only the Grappler 9 Pin transformer; using any other transformer could harm equipment and void warranty. When the Grappler will be out of use for an extended period, always remove the wall transformer from the electrical outlet. Failure to do so may overheat the unit and damage the transformer.

## HOW TO USE THE GRAPPLER 9 PIN

To use the Grappler 9 Pin takes only three easy steps. The first step is getting to know your software library to find out how many programs support your printer specifically, and how many support the ImageWriter. The second step is making certain that any programs providing printer selection have been installed, or selected within the program, correctly. (Printer installation is fully discussed under STEP2.) Lastly; having checked your software and verified the printer installation, you must set the Grappler 9 Pin DIP switch

In order to pave the way for error-free operation of the Grappler 9 pin, it is recommended that you take each of these steps one at a time.

### **STEP 1: Getting to Know Your Software**

Some software libraries may hold only one or two programs, others may include hundreds. Only a few minutes are needed to divide your library into groups:

Take those software programs that provide support for the Apple ImageWriter II printer and set them aside. An example would be Mousepaint for the Apple II, which supports only the ImageWriter.

**NOTE:** Virtually all Macintosh and Apple IIGs-specific applications fall into this category

Make note of any packages which support your particular parallel printer.

If you are new to computers and have just purchased your Apple and a parallel printer, the Grappler's ImageWriter emulation will be the easiest to use. If you wish to use your software's printer drivers instead of the Grappler's, refer to your user's guide for printer installation instructions.

### **STEP 2: Installing the Right Printer**

In many cases, a software program must be told what printer is being used. Even if your software names your printer, it is recommended that you select ImageWriter or ImageWriter II, and use the Grappler 9 Pin in emulation mode. This will eliminate the need to change Grappler switch settings between applications. Most Mac applications default to ImageWriter support.

**NOTE:** If your software takes special advantage of your printer, you may wish to use its driver and set the Grappler for Parallel Mode when using that title, but this will require changes in Grappler switch settings with each use. If the program is new and has not been installed, refer to the program operator's manual for instructions on how to install a printer in that program. Do this before proceeding to the next step.

### **STEP 3: Setting the GRAPPLER DIP Switch**

Once you know your software, you are ready to set the DIP switch according to one of two modes: ImageWriter Emulation Mode or Parallel Mode.

If most of your software is set for Apple ImageWriter, as recommended, then you must use the ImageWriter Emulation Mode. If your software is installed for your specific parallel printer, then you would use the Parallel Mode, which renders the Grappler "transparent" to the code being sent. Again, this should only be used when your program offers special features

for your particular printer.

The GRAPPLER DIP switch is comprised of four small switch handles that can be selected to ON or OFF. To set the DIP switch, use a pen or similar pointed object to change the handle direction depending on your program, set the DIP switch to either of the following modes:

1. ImageWriter Emulation Mode. If your program is written only for the Apple or the Apple DMP printer, set the Grappler DIP switch in the ImageWriter Mode according to your specific printer shown below:

### **ImageWriter Mode GRAPPLER DIP Switch Settings**

<b>B &amp; W PRINTERS</b>	<b>DIP Switch Handles</b>			
	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>
Brother 1109	ON	OFF	OFF	OFF
Brother I209, 1509, 1709	ON	ON	OFF	ON
Centronics PS210, P5220	ON	ON	OFF	ON
C. itoh ProWriter Jr. Plus	ON	ON	OFF	ON
C. itoh ProWriter	OFF	OFF	ON	ON
Citizen 120D	ON	ON	ON	ON
Citizen MSP-10, MSP-15E, MSP50	ON	ON	OFF	ON
Diconix 300W	ON	ON	OFF	ON
Epson FX-80,100, FX+ and compatibles	ON	ON	OFF	ON
Epson RX and compatibles	ON	ON	OFF	OFF
Epson LX	ON	OFF	OFF	OFF
Epson MX	ON	ON	ON	OFF
IBM ProPrinter	OFF	ON	OFF	OFF
NEC 8023	OFF	OFF	ON	ON
Okidata 192,193 (NOT IBM versions)*	OFF	ON	OFF	ON
Panasonic 1080i, 1091i Series	ON	ON	OFF	OFF
Star Gemini Series: SG, SD, SR, 10X	ON	OFF	OFF	ON
<b>COLOR PRINTERS</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>
Epson EX, JX	ON	ON	OFF	ON
C.itoh C3150	ON	ON	OFF	ON
Facit B3I00, B3150	ON	ON	OFF	ON
Okidata 292, 293 (NOT IBM versions)**	OFF	ON	OFF	OFF

\* PRINTER must be set for 8 bit graphics


\*\* May exhibit vertical page displacement, For best results, use Oki 192 settings when not printing in color.

If your printer is not listed, try the Epson FX setting. If this fails, contact your printer manufacturer for compatibility.

2. Parallel Mode. If your software application allows for selection of a specific parallel printer (not the ImageWriter), verify that switch handles B, C and D are set in the ON position. If you are printing graphics (8 bits), the A handle should also be set in the ON position.

The DIP switches are a rocker type switch. In order to set it properly, push down on the ON side to set it ON and push down the OFF side to set it OFF. Always unplug the Grappler 9 Pin power supply while changing the DIP switches.

The following illustration shows a setting of ON-ON-OFF-ON.

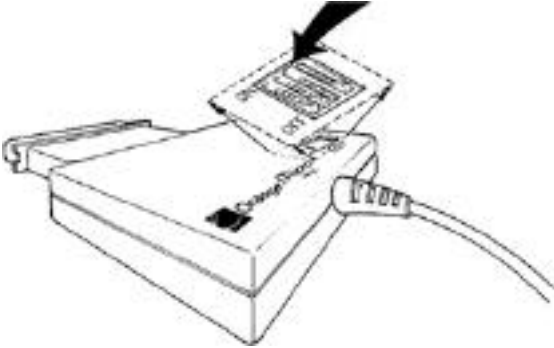

**NOTE:** Whenever a DIP switch setting is changed, the power supply must be unplugged from the Grappler for 5 seconds, and then reconnected. This allows the Grappler to “see” the change. If using a Macintosh you must also restart your computer.

**Important Note:**

Whenever you print text-only on an Apple II in the parallel mode, switch handle A should be set to the off position.

After the GRAPPLER DIP switch has been set to match your printing application, test the work you have done.

**Apple IIGS and IIc Installation Test**

Use the following test to check your work:


1. Turn on both the Apple computer and your printer. Make sure that the Grappler 9 Pin is plugged into the electrical wall socket.
2. Press CONTROL-RESET to reset the system.
3. With the system prompt ‘]’ showing on the computer screen, type:

**PR#1**



Now hit the Return key five times. Your printer should be printing the prompt character ']' each time you strike the Return key. If not, double check each of your installation procedures and glance over the "Installation Double-Checks" at the end of this section.

## Macintosh Installation Tests

1. Insert any Macintosh program into an active drive and turn on power.
2. Go to the CHOOSER under the  menu and select the Imagewriter. If the ImageWriter is not present in the CHOOSER, you must load the ImageWriter Driver into your System folder. Consult your Macintosh manual for details.
3. Select 'PRINT CATALOG' OR 'PRINT DIRECTORY' under the file menu.

**NOTE:** A few printers do not support reverse line feeds, which is required for total ImageWriter emulation. If the images printing are clear, but not properly aligned, try printing from another application before assuming a Grappler problem.

4. Load any Macintosh application and open a document. Be sure that ImageWriter has been selected in the CHOOSER under the g menu.
5. For best results when printing test, you need to have fonts loaded into your system that are twice the size as those you are working with on the screen. For example, if you are working on a document in 12 point Times font on the screen, you need to have 24 point Times loaded into the the system for your printer to use. In many applications, loaded fonts appear outlined under the font pull-down menu (eg., **36 Point**) and non-loaded fonts are not outlined (eg., **36 Point**) Consult your Macintosh manual for information about the Font/DA mover.

## Installation Double-Checks

If you are experiencing trouble in getting any response from your printer, check the following common problems:

1. Is the cable correctly attached between the Grappler 9 Pin and printer?
2. Is the Grappler 9 Pin transformer plugged into the wall and the interface?
3. Is the Grappler 9 Pin connected to the Apple?
4. Is the printer on?
5. Is the printer "on line", or ready to receive information from the computer?

6. Is there paper in the printer?
7. Will your printer self-test" (see printer manual)?

The above will confirm that all physical connections have been made correctly. If the test does not work, refer to the instructions under "Installing the Grappler 9 Pin" on page 2. Look at the printout to determine if all characters and functions are being printed as they should be. If not, review the software user's guide to verify printer installation (if it is installation); then re-check the Grappler DIP switch to see that it is in the correct mode for the software in use (see page 5). If the printed characters are still not correct, a final consideration would be the PIN configuration as described under instruction number 6 of "Installing the Grappler 9 Pin" on page 3.

## **TROUBLESHOOTING - GRAPPLER 9 PIN**

These are a few of the problems that might occur while using the Grappler 9 Pin printer interface.

**No Printing and/or "Garbage" Printing** -Indicates that printer selection is incorrect in the CHOOSER or the application, the computer is sending incorrect serial data (baud rate, stop bits, etc.), or that the GRAPPLER DIP switch has not been correctly set. To recover, re-check both the printer selection under your application's SET UP and the GRAPPLER DIP switch setting for your printer. See also: Graphics/Text switch below, and instruction number 6 under 'Installing the Grappler 9 Pin on page 3.

**Graphics/Text Switch** - Failure to reset GRAPPLER DIP switch handle A in the parallel mode when changing printing from text to graphics or from graphics to text may result in a number of printing problems. If you attempt to print text when switch A is in graphics position (ON), you may get italics or certain printer graphics characters. If you attempt to print graphics while switch A is in the text position (OFF), then you may get thin white lines running through the graphics picture. Set the GRAPPLER DIP switch in parallel mode for text or graphics in accordance with the instructions on page 5.

**White Horizontal Lines** - Check the printer's DIP switch. Some printers have an option for controlling the eighth data bit. If this option is available, make sure your printer is set for EIGHT data bits. If you are using the Grappler 9 Pin in parallel mode and are printing graphics, failure to set switch D to the ON position will also create horizontal white lines.

**All Text is Printed in Italics (IIC Plus and IIGS)** - If you are using the Grappler 9 Pin in parallel mode to print text documents, set switch A to the OFF position


**Pages Do Not Properly Align in Multiple Page Documents** - This problem is most often caused by the printer's inability to execute a Reverse Line Feed. The ImageWriter driver often moves the paper backwards for positioning purposes. The Grappler 9 Pin has a partial compensation for this, but it cannot completely correct for a feature not supported by your printer.

Unlike other Epson FX's, the Epson FX-86 & FX-286 printers do not have reverse-line feed. To get proper page alignment it is recommended that you use the Epson RX switch settings. Unless you are printing in color, the switch settings for the Oki 192 are recommended.

The best way to work around this is to print only a few pages at a time, realigning the paper before continuing, or to use single sheets when printing longer documents.

## **TO PRINT TO A DAISY WHEEL PRINTER OR TO USE YOUR PRINTERS BUILT-IN FONTS (FOR MACINTOSH USER'S ONLY).**

### **From Microsoft Word:**

1. Find the *Serial Printer and Typewriter* files on your original Microsoft Word disks.
2. Copy these files to the System Folder of the disk you normally start-up from when running Microsoft Word.
3. Restart your Macintosh.
4. Pull down the  Menu and select the *Serial Printer and Typewriter* in the chooser.
5. Make sure the Settings are 9600 baud and that the port where the Grappler 9 Pin is plugged in is set correctly.

### **From Microsoft Excel:**

1. Select *Printer Setup* from under the File Menu.
2. Turn on the TTY and 9600 baud selections and make sure the proper printer port is selected.

These drivers will only work with the above two applications.

# PARALLEL INTERFACE PIN ASSIGNMENT

Pins	Signal	Direction
1	Strobe	Out
2	Data Bit 1	Out
3	Data Bit 2	Out
4	Data Bit 3	Out
5	Data Bit 4	Out
6	Data Bit 5	Out
7	Data Bit 6	Out
8	Data Bit 7	Out
9	Data Bit 8	Out
10	ACK	IN
11	Busy	IN
12	Paper Empty	IN
13-16	No Connect	
17	Ground	
18	No Connect	
19-29	Ground	
30-36	No Connect	

# POWER SUPPLY OUTPUT SPECIFICATIONS


9VDC 200MA

Tip Polarity

Inside Tip Positive

# GRAPPLER TO 512K MAC CABLE DIAGRAM

Mac 512K users can purchase a special cable (PN: 70CAB0051 2) directly from Orange Micro Inc. This cable allows 512K users to connect to most parallel 9 Pin printers.

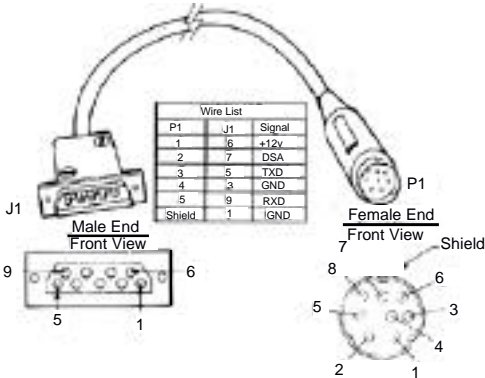

## **RADIO FREQUENCY INTERFERENCE**

This equipment generates and uses radio frequency energy, and if not installed and used properly in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for class B computing device in accordance with the specifications in Subpart j of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient the receiving antenna.
2. Relocate the computer into a different outlet so that the computer and receiver are on different branch circuits.
3. Consult the dealer or an experienced radio/television technician for additional suggestions.
4. Obtain a copy of "How to Identify and Resolve Radio-TV Interference Problems (Stock No. 004-000-00398-5) by the Federal Communications Commission, It may be ordered free of charge by writing to: U.S. Government Printing Office, Washington, D.C. 20402 and specifying the above title and its stock number.

Shielded cables must be used with this unit to meet compliance requirements of the FCC.

## LIMITED WARRANTY

Every Grappler 9 Pin board is fully tested and checked for quality prior to shipment. It is warranted to be free from defects in materials and workmanship for a period of **one (1) year** from date of purchase. During that time period, Orange Micro Inc. will, at no charge to the purchaser of record, repair or replace and defective unit returned to its Service Department in accordance with the following instructions:

**NOTE: Do NOT return the Grappler 9 Pin to Orange Micro inc. until you have received a Return Authorization Number. Phone the Orange Micro Technical Support Department at 714/779-2772 between 8 AM and 4 PM PST to obtain a Return Authorization Number.**

1. Provide Orange Micro Inc. with: Model, Serial Number, Proof of Purchase with Date, Return Address, and preferred return shipping method. Enclose a clear description of the problem experienced and any sample printouts showing the problem, if possible. Be sure that your printer properly executes its "self test" as described in its own documentation.
2. Ship in the original carton or securely packed in a cardboard carton with at least two inches of cushioned packing material on all sides. Mark the package "FRAGILE" and ship via UPS, Parcel Post, or Air Freight, insured and prepaid.

**NOTE: DO NOT send COLLECT - collect shipments will be refused and returned to sender.**

Orange Micro Inc. disclaims any liability to users of the Grappler 9 Pin for consequential damages of any kind arising from or connected with the use of the Grappler 9 Pin board.

This warranty is void in cases of misuse, abuse, abnormal conditions of operations or attempts to alter or modify the function of a part or assembly.

This limited warranty is in lieu of all other warranties expressed or implied, and no representative or other person is authorized to represent or assume for Orange Micro Inc. any warranty liability beyond that set forth herein.

This warranty gives you specific legal rights, and you may also have additional rights which vary from state to state. The warranty expressed herein applies to the Grappler 9 Pin sold and used in the United States of America.