


**PARALLEL PRINTER  
INTERFACE CARD**  
INSTALLATION AND OPERATING MANUAL



Apple Intelligent Subsystem

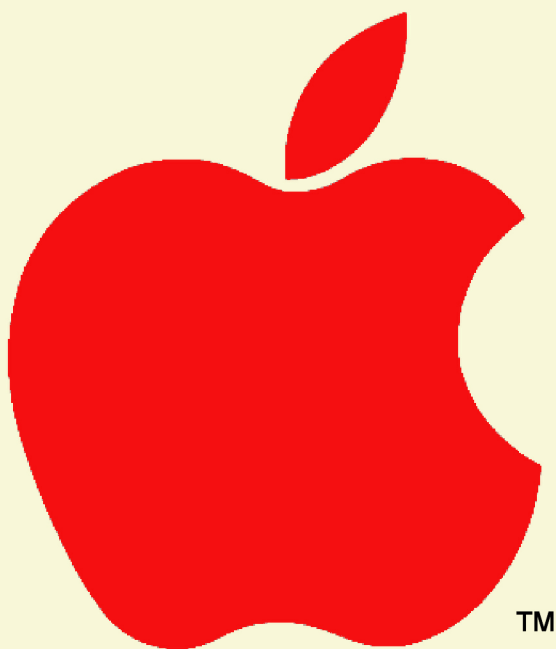

APPLE II  
PARALLEL PRINTER  
INTERFACE CARD (A2B0002X)  
INSTALLATION AND OPERATING MANUAL

**PLEASE READ THIS MANUAL BEFORE ATTEMPTING TO  
INSTALL THE PRINTER INTERFACE CARD INTO THE APPLE II.  
INCORRECT WIRING COULD CAUSE PERMANENT DAMAGE  
TO BOTH THE PRINTER INTERFACE CARD AND THE APPLE II.**

**PARALLEL PRINTER INTERFACE CARD  
INSTALLATION AND OPERATING MANUAL  
TABLE OF CONTENTS**

<b>SECTION</b>	<b>TITLE</b>	<b>PAGE</b>
	INTRODUCTION	<b>3</b>
I	INTERFACING TO THE PRINTER	<b>5</b>
	Connecting The Cable	
	Wiring The Jumper Block	
II	INSTALLING THE PRINTER CARD	<b>13</b>
III	PRINTER OPERATION	<b>15</b>
	Accommodating Different Printers	
	Starting To Use Your New Printer	
	Printer Commands	
IV	USING THE PRINTER CARD AS A GENERAL- PURPOSE, PARALLEL OUTPUT PORT	<b>21</b>
V	HARDWARE DESCRIPTION	<b>23</b>
	Introduction	
	Handshake Procedure	
	Schematic	
VI	FIRMWARE DESCRIPTION	<b>29</b>



# **APPLE II PARALLEL PRINTER INTERFACE CARD**

## **INTRODUCTION**

The Parallel Printer Interface Card allows the Apple II to produce hardcopy (printed) output on a wide variety of printers. This compact board not only provides a complete electronic link between the printer and the Apple II motherboard, but in addition it contains a powerful firmware package to handle:

- Interpretation of program commands for the printer,
- Compensation for varying printer line lengths,
- Special control characters peculiar to a given printer.

Using this built-in subroutine package, a user can easily control the printer from BASIC or the Monitor, to produce:

- Program listings
- Printed records and reports
- Debug listings and memory dumps

The Interface Card can be quickly adapted to most printers equipped with a 7- or 8-bit parallel interface. It can operate them at speeds up to 5000 char/second (3700 lines/minute at 80 char/line), or the maximum rated speed of the printer--whichever is lower. It can print 40 to 255 characters/line, determined by the printer.

The Printer Card is also useful in non-printer applications as a general purpose, 8-bit parallel output port. See Section 4 for information on using the board in this mode.



## I INTERFACING TO THE PRINTER

The Apple II Parallel Printer Card is designed to interface with a variety of printers; but the user must "customize" it to interface with the selected printer by:

1. Connecting the ribbon cable (delivered with the Parallel Printer Card) to the proper connection points in the printer, and;
2. Wiring the jumper configuration block for the "handshake" (communications) procedure recognized by the printer.

### Connecting the Cable

The twenty-wire interconnecting cable is illustrated at the end of this section. Ten to twelve wires (depending on the selected printer) must be connected to the printer. Cable connector diagrams for the Axiom EX800, the Centronics, and the SWTP PR40 printers are given on the pages following the cable illustration. For all other printers, use the twenty-wire cable illustration (Figure 2) and the interconnect information in the printer manufacturer's manual to develop your connector diagram (use the form in Figure 6). Connect the wires in the following order:

Step		Cable Wire(s)	
1	Connect both Grounds	1 & 20	to the printer "circuit" or "logic" ground pins. (Do not use "chassis" or "AC" ground)
2	Connect Data Lines	10-17	to the appropriate data input pins in the printer.

Notes: Data Line DP0 (cable wire 10) must go to the lowest numbered signal name (Least Significant Bit) in the printer. The lowest signal name is usually number 0; but it may be number 1, depending on the printer. (The printer signal names, which are specified in the printer manual, may not correspond to the connector pin numbers, so go by the signal names.)

Data Lines DP1-DP7 (cable wires 11-17) connect to sequentially higher numbered printer signal names. Some printers only utilize seven data lines (e.g. Axiom and PR40). Other printers utilize eight data lines (e.g. Centronics). If only seven data lines are utilized, leave printer cable wire 17 (DP7) unconnected.

3	Connect ACK	2	to the printer output pin.
---	-------------	---	----------------------------

Notes: ACK (ACKnowledge) should be connected to the printer output pin (labeled ACK, DATA ACCEPTED, or a similar name) which denotes the printer accepting data from the interface card.

Either ACK or  $\overline{\text{ACK}}$  polarity is acceptable, depending on the configuration of the jumper block.

Step	Cable Wire(s)
4 Connect STROBE	8 to the printer input pin.

Notes: STROBE should be connected to the printer input pin (labeled STROBE, DATA READY, or a similar name) which denotes the interface card telling the printer that data is ready for acceptance.

Either STROBE or  $\overline{\text{STROBE}}$  polarity is acceptable, depending on the configuration of the jumper block.

- 5 Tape all unconnected wires from the cable to avoid unintentional shorts.

## Wiring the Jumper Block

The jumper configuration block must be wired for the "handshake" procedure the printer recognizes. To wire the jumper block, take the following steps:

### Step

- 1 Locate the jumper block (in the lower right corner of the Parallel Printer Board-location B1).
- 2 Note the position of the jumper block in location B1. The upper left corner of the jumper lock is notched, denoting pin #1. The jumper block must be re-inserted so the notched upper left corner matches the notched upper left corner of the socket.
- 3 Remove and wire the jumper block.

Notes: Wiring diagrams for the Axiom, Centronics, and SWTP PR40 printers are illustrated at the end of this section.

For all other printers, take the following steps:

- A. Determine whether the printer requires STROBE (positive-going) or  $\overline{\text{STROBE}}$  (negative-going) strobe edge.
- B. Determine whether the printer output is an ACK (negative-going) or an  $\overline{\text{ACK}}$  (positive-going) signal edge.
- C. Select the diagram in Figure 1 below that matches the STROBE/ACK "handshake" determined in A and B above.
- D. Wire the jumper block according to the appropriate diagram.


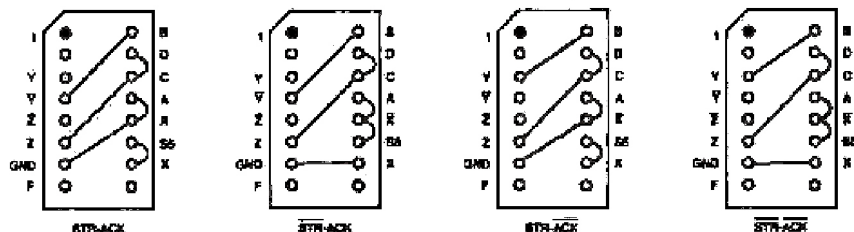


Figure 1. Jumper Block Diagrams

The STROBE/ACK specifications are usually found in the manual describing the printer. The names used to identify STROBE and ACK signals may vary.

If the STROBE/ACK signals are not defined, as a last resort try each wiring diagram in Figure 1. The Apple II will control the printer properly when the correct configuration is found. (Attempting to use the printer with an incorrect configuration will not damage the printer or the Apple II.)

- 4 Re-insert the jumper block in location B1 on the Parallel Printer Card. The notched upper left corner of the jumper block must match the notched upper left corner of the socket.

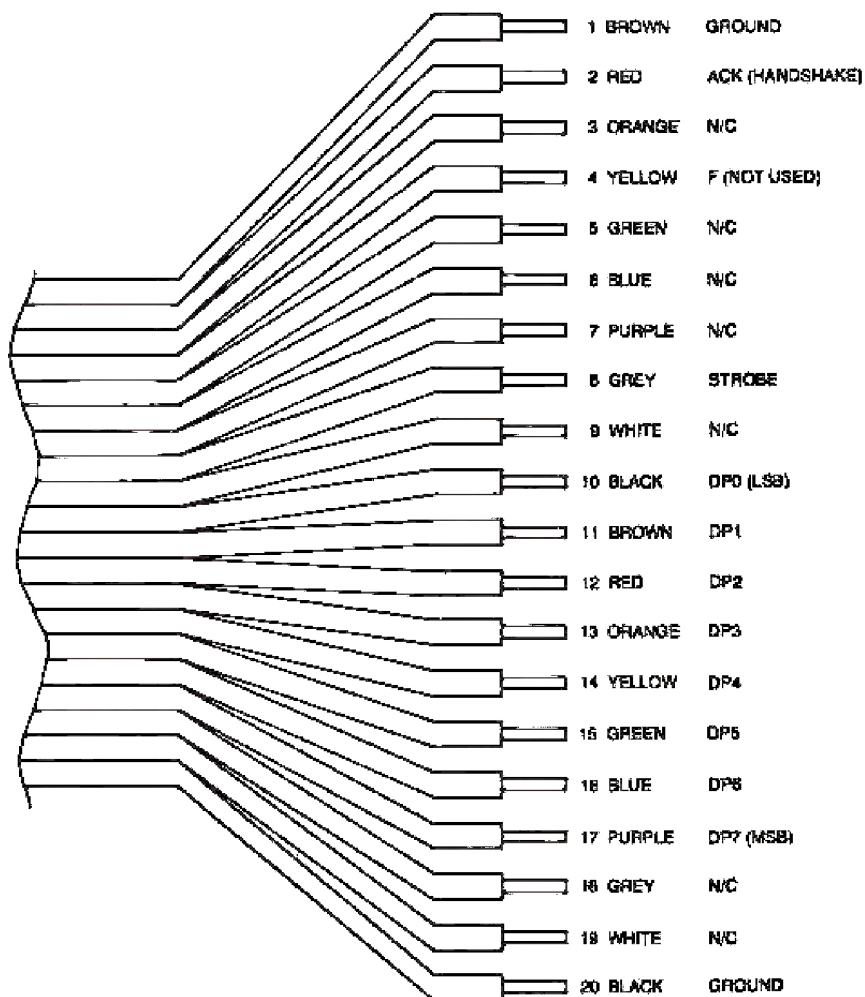

1 N/C = NO CONNECTION  
 2 LSB = LEAST SIGNIFICANT DATA BIT OUT  
 3 MSB = MOST SIGNIFICANT DATA BIT OUT

Figure 2. Interconnecting Cable Diagram

## Cable Connector Table

### Axiom EX800 Printer

The Axiom EX800 uses a DB-25 male connector (ITT-Cannon Part #DB25P). The DB-25 male connectors are widely used in RS-232 interface devices.

Apple II	Printer Board Pin	Wire Color	EX800 Pin
GND	1	Brown	7
ACK	2	Red	14
STR	8	Grey	24
DP0	10	Black	15
DP1	11	Brown	16
DP2	12	Red	17
DP3	13	Orange	18
DP4	14	Yellow	19
DP5	15	Green	21
DP6	16	Blue	23
GND	20	Black	7

### Jumper Configuration Block Wiring Diagram

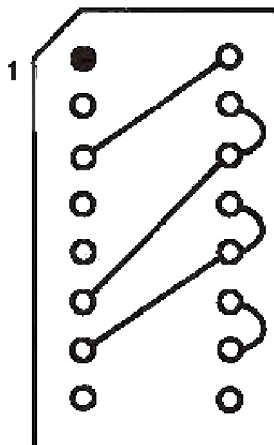


Figure 3. Axiom EX800 Example

## Cable Connector Table

### Centronics Printers

All standard Centronics printers use the same interface. Centronics printers require an Amphenol type 47, part #47-30360 connector.

Apple II	Printer Board Pin	Wire Color	Centronics Pin
GND	1	Brown	14
ACK	2	Red	10
STR	8	Grey	1
DP0	10	Black	2
DP1	11	Brown	3
DP2	12	Red	4
DP3	13	Orange	5
DP4	14	Yellow	6
DP5	15	Green	7
DP6	16	Blue	8
DP7	17	Violet	9
GND	20	Black	16

### Jumper Configuration Block Wiring Diagram

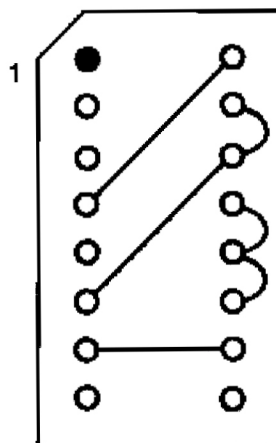


Figure 4. Centronics Example

## Cable Connector Table

### SWTP PR40 Printer

The SWTP requires a Molex receptacle, #03-09-1122. The connector uses both male and female pins and is wired as follows:

Apple II	Printer Board Pin	Wire Color	PR40 Pin	PR400 Pin Type
GND	1	Brown	1	Female
ACK	2	Red	2	Female
STR	8	Grey	3	Male
	—	N.C.	4	Female
DP5	15	Green	5	Female
DP6	16	Blue	6	Female
	—	N.C.	7	Male
DP3	13	Orange	8	Female
DP4	14	Yellow	9	Female
DP0	10	Black	10	Female
DP1	11	Brown	11	Female
DP2	12	Red	12	Male
GND	20	Black	1	Female

### Jumper Configuration Block Wiring Diagram

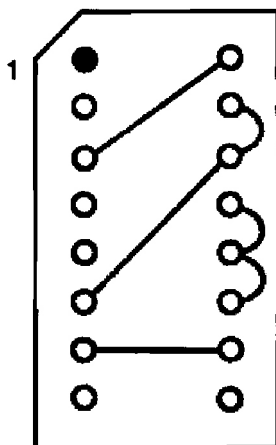


Figure 5. SWTP Example



## Cable Connector Table

### User's Printer Worksheet

Apple II	Printer Board Pin	Wire Color	Printer Pin
GND	1	Brown	_____
ACK	2	Red	_____
STR	8	Grey	_____
DP0	10	Black	_____
DP1	11	Brown	_____
DP2	12	Red	_____
DP3	13	Orange	_____
DP4	14	Yellow	_____
DP5	15	Green	_____
DP6	16	Blue	_____
GND	20	Black	_____

### Jumper Configuration Block Wiring Diagram

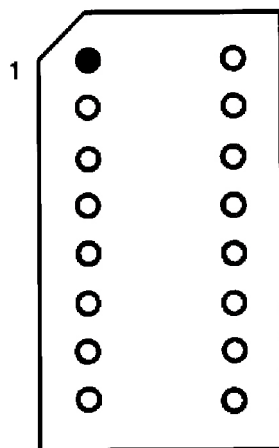


Figure 6. User's Cable and Configuration Block Diagram



## **II INSTALLING THE PRINTER CARD**

To install the Parallel Printer Card, take the following steps:

### **Step**

- 1 Turn the Apple II off.

**Note:** Power should always be off when inserting or removing a card. If the power is on, removal or insertion of a card could cause permanent damage to both the card and the Apple II.

- 2 Take off the lid and look at the row of eight connectors at the rear. Each connector is numbered (0-7) just in back of the connector. The numbered connectors are called slots.
- 3 Plug the Parallel Printer Card into any slot except slot #0.

**Note:** Slot #0 is reserved for future expansion and cannot be utilized by the Parallel Printer Card.

We recommend that you plug the card into slot #1, because the commands in the following section use slot #1.

When you sit at the keyboard, the component side of the Printer Card will be to your right when you insert it.

- 4 Gently plug the 20-pin flat cable connector into the mating connector on the Parallel Printer Card.

**Note:** The connector should be inserted so the flat cable comes out of the connector away from the board (not next to the board).

- 5 Drape the cable over the back of the case (with the lid off) and put the lid on.

**Note:** The pressure between the lid and the case acts as a cable clamp, preventing a tug on the cable from putting stress on the connector or Parallel Printer Card.

- 6 Plug the other end of the cable into the printer I/O connector.



### III PRINTER OPERATION

#### Accommodating Different Printers

Interpretation of Carriage Return and Line Feed character sequences varies from printer to printer. The following table summarizes the possible interpretations.

Method	Character Interpreted	Action
1	Carriage Return Line Feed	Causes carriage return and advances line. Causes no action.
2	Carriage Return Line Feed	Causes carriage return. Advances line.
3	Carriage Return Line Feed	Causes no action. Causes carriage return and advances line.
4	Carriage Return Line Feed	Causes carriage return and advances line. Advances line.

The Apple II adds a Carriage Return to the end of every line, and; the Parallel Printer Card adds a Line Feed character to the end of each line.

Therefore, each line sent to the printer is terminated by a Carriage Return and a Line Feed.

If the printer automatically adds another Line Feed character to the end of each line, double spacing of the printed lines may occur. If desired a command described below may be used to turn off the automatic printer Line Feed.

The number of columns (characters) per line also varies from printer to printer. When using a printer with a TV monitor, the line width is set to 40 columns, the width of the TV monitor. When using the printer alone, the line may be set to any width from 40 to 255 columns (depending upon the printer's capacity). The Parallel Printer Card is configured to accommodate the following Apple BASIC conventions:

- BASIC Listings will be formatted to prevent splitting command words at the end of the line.
- The TAB command and PRINT "comma" command formats will be printer dependent, regardless of line width.

In other words, setting the line width also sets the TAB, PRINT "comma," and BASIC Listing conventions to accommodate the new line width.

## Starting to Use Your New Printer—An Example

Once the Parallel Printer Card is configured to match the printer and installed in a slot, it is ready for use.

The Printer Commands in the examples below are in Apple II BASIC. Apple Monitor I/O Commands and Apple Basic Program I/O Commands are listed at the end of this section.

Command	Explanation
RESET B <sup>c</sup> RETURN	Interrupts any program execution and transfers control to BASIC.
> PR#1	Turns Parallel Printer Card on. All data displayed on the TV monitor screen is also sent to the printer with the following exceptions: <ul style="list-style-type: none"><li>• Graphic data is not printed</li><li>• Backward TABs and VTABs do not work. (Forward TABs work correctly.)</li></ul>
	Notes: I/O slot 0 cannot be entered. If the incorrect slot number is typed, all output will go to the wrong slot and no data will be displayed or printed. Depress RESET, and the computer will return to TV monitor display only.  If the printer is not plugged in, turned ON, and ready to print, it will look BUSY to the system; which will "hang up" waiting for it. To clear this waiting state, get the printer ready to print (see its manual), then depress Apple II's RESET key (to clear the busy flag). The program may then be re-started.
>PRINT 6+7 RETURN	The statement and its result should appear on both the printer and the monitor screen.

Notes: Most printers wait for a Carriage Return and then print the entire line.

Since the TV monitor display is designed for 40 characters per line, the printer will behave like a 40 column (40 characters per line) printer as long as the monitor screen display is on.

On some printers, several lines must be printed before the paper advances far enough for the first line to be seen.

If at this point, data does not print at the printer:

1. Verify the Parallel Printer Card is plugged into slot #1 (specified in the PR#1 command). Slot #1 is the **second** slot from the left.

2. Verify that the wiring of the cable and jumper block are correct.
3. Verify that PR#1 was typed correctly.
4. Verify that the printer is turned on, and that the system has been RESET since.

If the printer still does not print, ask your local Apple dealer for assistance.

## Printer Commands

The Parallel Printer Card Commands begin with CTRL I (<sup>C</sup>I). The command conventions are:

**LOWER CASE WORDS** Enter the data identified by the word.

**UPPER CASE CHARACTERS** Type the character(s) or number(s) shown.

**CONTROL CHARACTERS** Control characters are indicated by a superscript C; e.g.: I<sup>C</sup>. A control character is entered by depressing the CTRL key and the character key simultaneously. (Similar to using the shift key to type a capital letter.)

**SPACING** Spacing in the command format is for legibility only. Spaces are not required when the command is entered.

For example, I<sup>C</sup>no N RETURN means:

1. Type I while holding the CTRL key down.
2. Enter a number at the keyboard.
3. Type N at the keyboard.
4. Depress RETURN.

The Printer Commands are shown below. They may be used in the command mode from either BASIC or the Monitor (except for PR# and P<sup>C</sup> commands—see explanations).

Command	Explanation
I <sup>C</sup> n N RETURN	Turns off monitor screen and prints n columns per line on printer. The number of columns may be any number from 40 to 255.
I <sup>C</sup> I RETURN	Returns output to TV monitor screen as well as to printer.
I <sup>C</sup> K RETURN	Turns off automatic printer Line Feed.

<b>I<sup>C</sup> letter<sup>C</sup> RETURN</b>	Changes printer command control character recognized by printer. For example I <sup>C</sup> A <sup>C</sup> changes the control character recognized by the printer.
<b>letter<sup>C</sup> I<sup>C</sup> RETURN</b>	Changes printer control character back to I <sup>C</sup> . For example, A <sup>C</sup> I <sup>C</sup> .
<b>PR# slot no. RETURN</b>	Turns Printer Card on from BASIC. The slot number must identify the slot in which the Parallel Printer Card is inserted. Any number from 1 to 7 may be entered.
<b>PR#0 RETURN</b>	Turns the Parallel Printer Card off from BASIC.
<b>slot no. P<sup>C</sup></b>	Turns on Printer Card from the Monitor. The slot number must identify the slot in which the card is inserted.
<b>OP<sup>C</sup></b>	Turns the Printer Card off from the Monitor.

**Notes:** For users of Applesoft BASIC on cassette tape:

Applesoft BASIC does not yet allow "PR#" commands (which are used in Apple Integer BASIC to turn the printer ON and OFF). Therefore, the printer must be controlled as follows:

To turn ON, type

POKE 54, 0; POKE 55, 192 + slot no.

To turn OFF, type

POKE 54, 240; POKE 55, 253

These commands must be entered on a single line, as shown. They will work from the Monitor and Apple BASIC as well as from Applesoft BASIC, but are not required.

All other commands, using I<sup>C</sup>, work from Applesoft BASIC.

## Using Printer Commands in BASIC Programs

Printer control within BASIC programs is accomplished by embedding the commands (shown above) in PRINT statements.

<b>&gt;10 PR#1</b>	Turns off Printer Card.
<b>&gt;20 PRINT "I<sup>C</sup> no. N";</b>	Turns off TV monitor screen display and prints n columns per line at the printer
<b>&gt;30 PRINT "I<sup>C</sup> I";</b>	Returns output to TV monitor screen as well as printer.
<b>&gt;40 PRINT "I<sup>C</sup> K";</b>	Turns off the Line Feed code.
<b>&gt;50 PRINT "I<sup>C</sup> A<sup>C</sup>";</b>	Changes I <sup>C</sup> to A <sup>C</sup> for printer listing of BASIC program.



>60 PRINT "A <sup>C</sup> I <sup>C</sup> ";	Restores I <sup>C</sup> as the printer control command character.
---	---

### Example Of Control From a BASIC Program

Here is a typical BASIC program using the printer control commands.

10 PR #1	Turn on Printer Card.
(20 PRINT "I <sup>C</sup> K");	Only if printer advances line on Line Feed code.
30 PRINT "I <sup>C</sup> 80 N";	Output on printer only.
40 PRINT "PRINTER"	
50 PRINT "I <sup>C</sup> I";	Output on screen and printer.
60 PRINT "SCREEN AND PRINTER"	
70 PR #0	Turn off printer card.
80 PRINT "SCREEN ONLY"	
90 END	

### Listing Programs Containing Print Commands

To list a BASIC program containing printer control commands, take the following steps:

Command	Explanations
> PR#1	Turns Parallel Printer Card on.
>I <sup>C</sup> K RETURN	Only if printer advances line on Line Feed code.
>I <sup>C</sup> A <sup>C</sup> RETURN	Changes I <sup>C</sup> character to A <sup>C</sup> character. The printer treats I <sup>C</sup> command sequences in a BASIC Program listing as a command and changes printer operation as specified in the command. To avoid this problem the I <sup>C</sup> must be changed to another character, e.g.: A <sup>C</sup> .
>A <sup>C</sup> 80 N RETURN	Turns off TV monitor screen and outputs on 80 column printer.
>LIST	LIST is not displayed because the TV monitor display is off.
>A <sup>C</sup> I <sup>C</sup> RETURN	Enter after the listing is complete to restore I <sup>C</sup> as the printer control command character.

## OPERATING HINTS

The three techniques detailed below will guard against the most common printing problems.

1. Before using the printer in your program (PR#1 statement), be sure to HOME the cursor and clear the screen. (A CALL-936 statement in your program does this.)
2. If you are printing more than 40 characters per line, be sure to re-set the line length to 40 characters per line before using the PR#0 command (which turns off the printer interface).
3. Before using the printer to list a program that has printer control commands embedded in it, change the control character from I to some other character. Then re-set I as the control character before running the program.

## **IV USING THE PRINTER CARD AS A GENERAL-PURPOSE, PARALLEL OUTPUT PORT**

The Parallel Printer Card can be used as a general-purpose, 8-bit parallel output card to drive music synthesizers, digital-to-analog converters, etc.

If data is stored at location  $\$C080 + \$N0$  (where N is the slot number), then the data will appear on Printer Board Data Lines (DP0-DP7), and will remain until the next "STORE" instruction to that location is executed.

From BASIC this data transfer may be accomplished by typing:

POKE ( $-16256 + N16$ ), DATA

N is the slot number of the Printer Card, and DATA is the Data to be put out.

Each time a byte is sent to the Printer Card, a strobe will be generated on the STR line. The strobe polarity may be set as described earlier for strobes to printers.



## V HARDWARE DESCRIPTION

### Board Layout

The Printer Board contains a 6309 (256 × 8) PROM for printer firmware, an 8-bit data register, and handshake and configuration logic at the following board locations:

Location	Package Component	Function
B1	16-Pin DIP Header	Sets handshake logic levels.
B2	74LS74	Forms response detection from printer.
B3	74LS298	A. Two bits of 8-bit register are latched into two sections. B. An output strobe or level for handshake is formed using the other two sections.
A4	74LS174	Six bits of 8-bit data register latched into 74LS174.
A1	74LS00	Performs PROM address alteration. (A response signal alters the address range of the PROM; thus altering the firmware program.)

### Handshake Procedure

The Parallel Printer Interface Card will accommodate a variety of handshake procedures. The following description of the more common two-line handshake should enable the engineer/user to design other handshake procedures.

#### STROBE/Edge Handshake

Pulse (STR or STR) to printer indicates data transfer ready. Edge (ACK or ACK) response from printer indicates printer ready to accept data.

**Note:** Although many printer documents describe the acknowledge signal as a level, careful inspection will often show the critical timing of the acknowledge signal to be on edge.

The Strobe/Edge Handshake is the most common handshake. Figure 7 illustrates the relative timing and defines the level for the handshake signals.


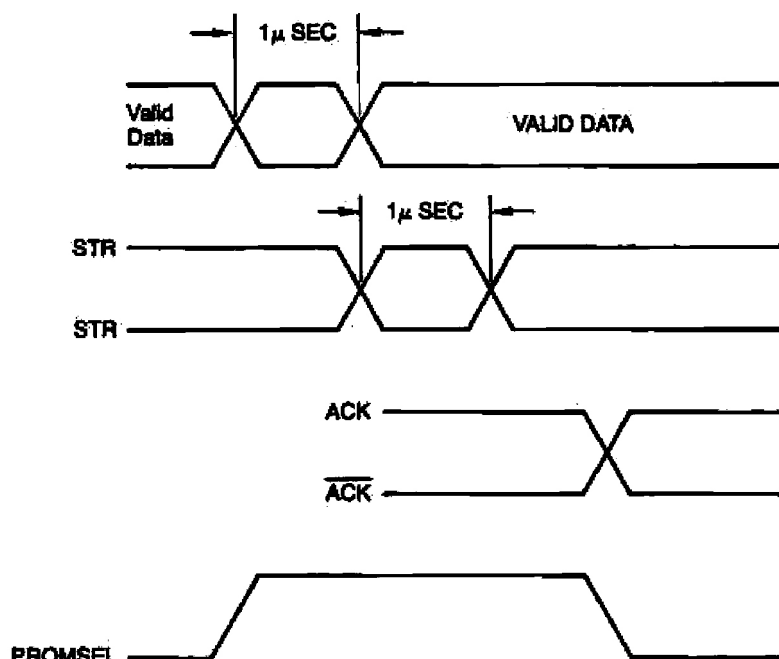


Figure 7. Strobe/Edge Timing


In Figure 8, FF1 is used to synchronize the incoming ACKnowledge signal to the Apple II system timing. The output of FF1 is connected to the clock input of FF2 to reset FF2 when the desired acknowledge edge occurs. (FF2 has been previously set by the DEV signal that occurred when the last data was sent to the printer.) Thus, output Z (Q of FF2) will be high causing PROMSEL to be low from the time a data word is sent until the acknowledge edge is received. When PROMSEL is low, the PROM is in its Printer-Not-Available program mode.

When a data word is sent to the printer, MUX1 will switch from the A input to the X input. (These are complementary for a strobe pulse response.) Thus, output M1 of MUX1 will change state. Since X is sent to the same state as A, the output STR of MUX2 will not change state with the DEV signal. On the next  $\Phi_1$  clock, STR will return to its rest state, completing the STR pulse generation. The deliberate delay in STR from the first DEV input is necessary because an indexed store operation from the 6502 will cause a false DEV the cycle prior to the legitimate store operation. Figures 9 and 10 show a functional block diagram of the Printer Card, and the actual schematic.

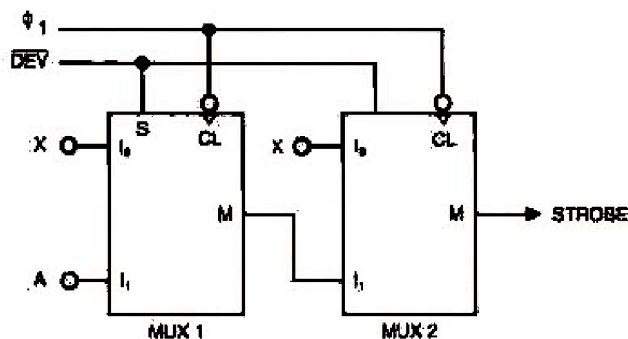

### Strobe Pulse

$\overline{\text{STR}}$	A = $S_{\text{on}} 5$	STR	A = GND
	X = $S_{\text{on}} 5$		X = GND
	X = GND		X = $S_{\text{on}} 5$

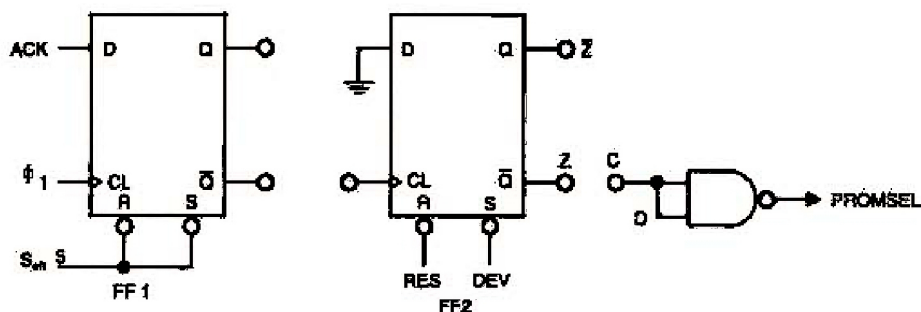

### Edge Response

$\overline{\text{ACK}}$	B = $\bar{Y}$	ACK	B = $\bar{Y}$
-------------------------	---------------	-----	---------------

Figure 8. Jumper Configuration Block Connections

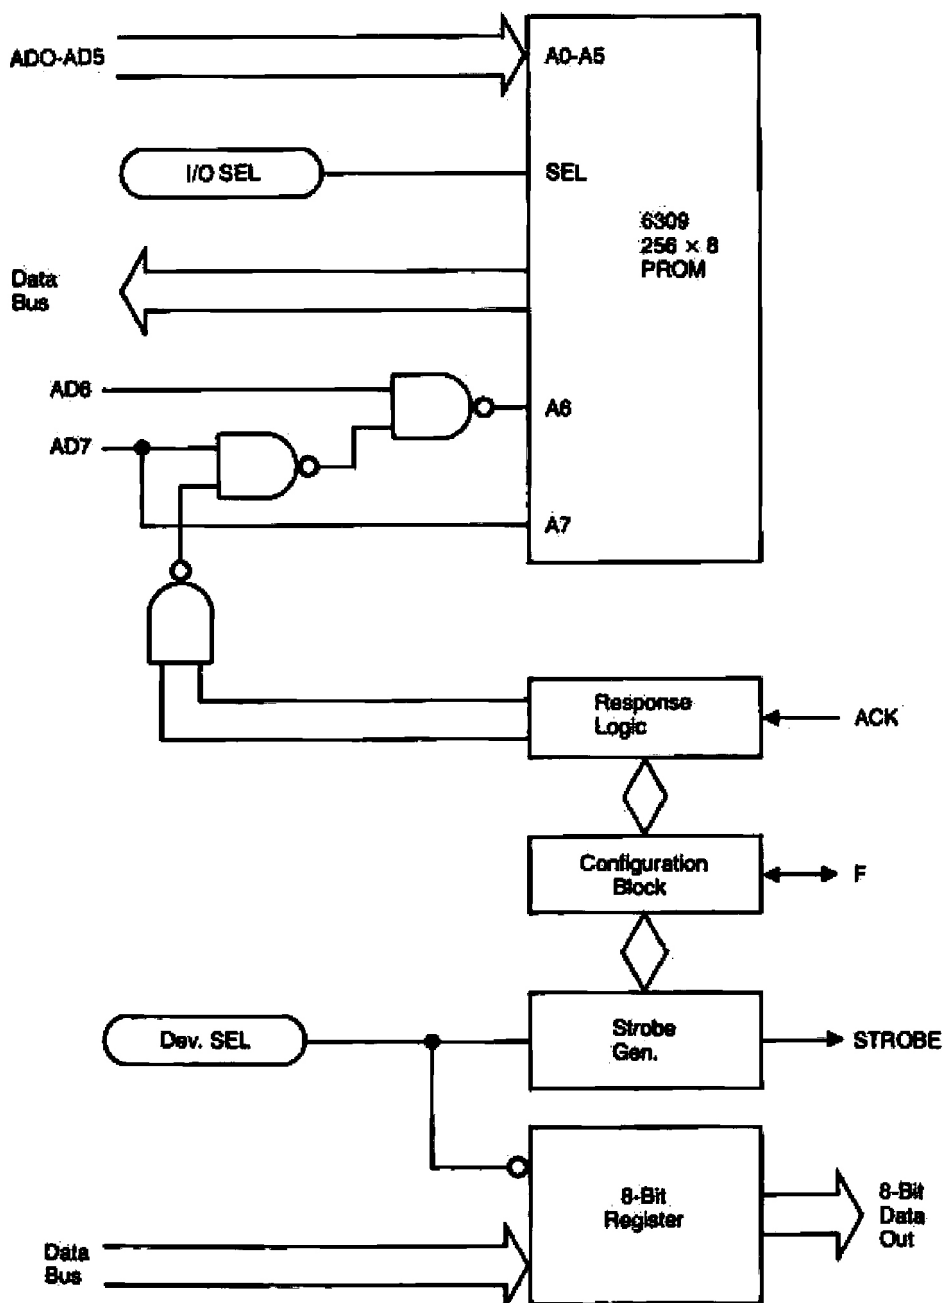


Figure 9. Parallel Printer Board Block Diagram







## VI FIRMWARE DESCRIPTION

The commented firmware listing on the following pages fully describes the Apple II Parallel Printer Interface Card Firmware. The listing contains four sections:

- Address Transformation Information

Note. The Firmware listing provides the apparent address of the printer card to the CPU. Due to address mapping, the apparent address and the real PROM address do not agree.

- Printer Card Equates
- Printer Card Firmware Listing
- Symbol Cross - Reference Table

The PR# BASIC Command or the P<sup>C</sup> Monitor Command are not required to access the printer board firmware.

For direct output,

- a) preset MSTRT      (\$5F8+\$N)  
          MODE        (\$678+\$N)  
          ESCHAR      (6F8+\$N)  
          FLAGS       (\$778+\$N)

- b) enter the program once at \$CN00. (The normal entry point is \$CN02).

Data in the accumulator is output on the data lines with STR when the responding device is ready.

The firmware program exits by an RTS or a JMP COUT1, depending on B7 of the MODE word in memory. The accumulator, X and Y registers, and stack pointer are not affected.

0000			0010 *****		
0000			0020 *		
0000			0030 * PRINTER CARD I FIRMWARE	*	
0000			0040 *	*	
0000			0050 * W02 11/1/77	*	
0000			0060 * APPLE COMPUTER INC	*	
0000			0070 * ALL RIGHTS RESERVED	*	
0000			0080 *	*	
0000			0090 *****		
0000			0100 WNDWIDTH EQU \$21		WINDOW WIDTH (MARGIN)
0000			0110 CH EQU \$24		CURSOR HORIZONTAL INDEX
0000			0120 CSWL EQU \$36		LOW ORDER COUT SWITCH BYTE
0000			0130 MSTRT EQU \$938		MARGIN START
0000			0140 MODE EQU \$588		AFTER ESC CHAR IN B7
0000			0150 ESCCHAR EQU \$638		CURRENT ESC CHAR
0000			0160 FLAGS EQU \$688		B7=VID-ALSO, B0=CRLF
0000			0170 COL EQU \$738		COLUMN COUNT
0000			0180 DEV EQU \$C080		+%NO ACTIVATES THE DEV LINE
0000			0190 COUT1 EQU \$FDF0		VIDEO OUTPUT ENTRY
0000			0200 IORTS EQU \$FF58		FIXED RTS INSTRUCTION
0000			0210 *		
0000			0220 *		
0000 18	2		0230 ENT0 CLC		DEFAULT ENTRY
0001 80 00	2*		0240 BCS +		
0003			0250 DRQ *-1		
0002 38	2		0260 ENT1 SEC		NORMAL ENTRY
0003 48	3		0270 PHA		
0004 8A	2		0280 TXA		
0005 48	3		0290 PHA		SAVE REGISTERS ON STACK
0006 98	2		0300 TYA		
0007 48	3		0310 PHA		
0008 08	3		0320 PHP		
0009 78	2		0330 SEI		DISABLE INTERRUPTS
000A 20 58 FF	6		0340 JSR IORTS		RETURNS %CN ABOVE STACK
000D 8A	2		0350 TSX		(N IS SLOT NUMBER)
000E 68	4		0360 PLA		
000F 68	4		0370 PLA		
0010 68	4		0380 PLA		
0011 68	4		0390 PLA		
0012 AB	2		0400 TAY		CHAR TO Y-REGISTER
0013 CA	2		0410 DEX		
0014 9A	2		0420 TXS		GET %CN FROM ABOVE STACK
0015 68	4		0430 PLA		
0016 28	4		0440 PLP		RESTORE STATUS
0017 AA	2		0450 TAX		%CN TO REG X
0018 90 47	2*		0460 BCC	DEFAULT	
001A 8D 88 05	4*		0470 LDA	MODE, X	AFTER ESC CHAR?
001D 10 4E	2*		0480 BPL	ESCTST	NO.
001F 98	2		0490 TYA		CHAR TO REG-A
0020 29 7F	2		0500 AND	##7F	MASK OUT BIT 7
0022 49 30	2		0510 EOR	##30	ALTER BITS
0024 C9 0A	2		0520 CMP	##A	"Q"- "9"
0026 90 29	2*		0530 BCC	DIG	BRANCH IF YES
0028 C9 78	2		0540 CMP	##78	"H"- "0"
002A 80 06	2*		0550 BCS	SETFLG	YES, SET OR CLR FLAGS
002C 98	2		0560 TYA		GET ORIGNAL CHAR AGAIN
002D 9D 38 06	5		0570 STA	ESCHAR, X	STORE NEW ESC CHAR
0030 90 16	2*		0580 BCC	DONE1	BRANCH ALWAYS TAKEN
0032 4A	2		0590 SETFLG	LSR	A
0033 6A	2		0600 ROR		
0034 80 08	2*		0610 BCS	CLRFLG	CLR FLAGS IF B1 WAS ONE
0036 1D 88 06	4*		0620 ORA	FLAGS, X	SET FLAGS SELECTIVELY
0039 10 0A	2*		0630 BPL	NEWFLG	
003B AD 28	2		0640 LDY	##28	IF IN VIDEO ALSO THEN SET
003D 84 21	3		0650 STY	WNDWIDTH	WINDOW WIDTH (MARGIN)=40
003F 90 04	2*		0660 BCC	NEWFLG	BRANCH ALWAYS TAKEN
0041 3D 88 06	4*		0670 CLRFLG	AND	FLAGS, X
0044 18	2		0680 CLC		
0045 9D 88 06	5		0690 NEWFLG	STA	FLAGS, X
0048 7E 88 05	7		0700 DONE1	ROR	MODE, X
004B 68	4		0710 DONE2	PLA	
004C AB	2		0720 TAY		
004D 68	4		0730 PLA		RESTORE REGISTERS
004E AA	2		0740 TAX		
004F 68	4		0750 PLA		THEN RETURN
0050 6D	6		0760 RTS		
0051			0770 *		
0051			0780 *		
0051 AD 0A	2		0790 DIG	LDY	##A
0053 7D 38 05	4*		0800 DLOOP	ADC	MSTRT, X
0056 88	2		0810 DEY		
0057 D0 FA	2*		0820 BNE	DLOOP	

0099	B3 21	3	0830	STA	WINDWTH		
0058	9D 3B 05	3	0840	MINIT	STA	HSTR1, X	UPDATE MARGIN START
005E	3B	2	0850	SEC			INDICATE 'AFTER ESC CHAR'
009F	8D E7	2*	0860	BCS	DONE1		BRANCH ALWAYS TAKEN
0041			0870	*			
0041			0880	*			
0041	A9 B9	2	0890	DEFAULT	LDA	##B9	DEFAULT CHARACTER (CONTROL-1)
0063	9D 3B 06	5	0900		STA	ESCHAR, X	
0066	9D 8B 06	5	0910		STA	FLAGS, X	VIDEO ALSO, CR/LF ON
0069	A9 02	2	0920		LDA	#ENT1	
0068	B3 36	3	0930		STA	CSWL	SET FOR NORMAL ENTRY
006D	9B	2	0940	ESCTST	TYA		MOVE CHAR TO REG-A
006E	3D 3B 06	4*	0950		EDR	ESCHAR, X	
0071	0A	2	0960		ASL	A	ESC CHAR? (7 LSB'S)
0072	F0 E7	2*	0970		BEQ	MINIT	BRANCH IF YES
0074	5E B8 05	7	0980		LSR	MODE, X	NO, CLR 'AFTER ESC CHAR'
0077	9B	2	0990		TYA		
0078	4B	3	1000		PHA		SAVE CHAR ON THE STACK
0079	0A	2	1010		FXA		
007A	0A	2	1020		ASL	A	
007B	0A	2	1030		ASL	A	GENERATE N*10 AS AN INDEX TO
007C	0A	2	1040		ASL	A	THE DEVICE LINE (REG-Y)
007D	0A	2	1050		ASL	A	
007E	4B	2	1060		TYA		
007F	9D 4D	2*	1070		BCC	PRNT	BRANCH ALWAYS TAKEN
0081	9D FE	2*	1080		BCC	+2	IMAGE 'WAIT FOR READY'
0083	99 B0 CD	5	1090	DUT	STA	DEV, Y	OUTPUT CHAR TO PRINTER
0086	9D 39	2*	1100		BCC	PRNT	LOOP IF WAS TAB
0088	A9 0D	2	1110		EDR	##D	
008A	0A	2	1120		ASL	A	CARRAGE RETURN IN 7 LSB'S?
008B	0D 0D	2*	1130		BNE	FINISH	BRANCH IF NOT CR
008D	9D 3B 07	5	1140		STA	COL, X	CLEAR COLUMN COUNT
0090	8D B8 06	4*	1150		LDA	FLAGS, X	FOR CR/LF CHECK (B0)
0093	6A	2	1160		RDR	A	
0094	29 B0	2	1170		AND	##B0	
0096	09 0A	2	1180		ORA	##A	GENERATE LINE FEED
0098	8D 5F	2*	1190		BCS	PRNT2	OUTPUT IF CR/LF MODE
009A	8D B8 06	4*	1200	FINISH	LDA	FLAGS, X	
009D	1D 0B	2*	1210		BPL	NOVID	
009F	6B	4	1220		PLA		
00A0	4B	2	1230		TYA		
00A1	4B	4	1240		PLA		IF VIDEO-ALSO MODE THEN
00A2	AA	2	1250		TAX		RESTORE REGISTERS AND END
00A3	4B	4	1260		PLA		WITH VIDEO OUT ROUTINE
00A4	4C F0 FD	3	1270		JMP	COUT1	
00A7	8D 3B 07	4*	1280	NOVID	LDA	COL, X	COLUMN COUNT
00AA	F0 0B	2*	1290		SEQ	SETCH	IF ZERO, CLEAR CURSOR HORIZ
00AC	E5 21	3	1300		SBC	WINDWTH	CHECK FOR WITHIN 8 CHARS OF
00AE	E9 F7	2	1310		SBC	##F7	WINDOW WIDTH (MARGIN)
00B0	9D 99	2*	1320		BCC	DONE2	IF NO, THEN DONE
00B2	69 1F	2	1330		ADC	##1F	ADD 32 (FORMING 32-39)
00B4	1B	2	1340	SETCH	CLC		FOR NEW CURSOR HORIZ IF
00B5	B3 24	3	1350		STA	CH	NEAR MARGIN (FOR LIST)
00B7	9D 92	2*	1360		BCC	DONE2	BRANCH ALWAYS TAKEN
00B9	7D FE	2*	1370		BVS	+2	IMAGE FOR 'WAIT FOR READY'
00BB			1380		ORC	+6	
00C1	9D 21	2*	1390	PRNT	BCC	PRNT1	TAKEN WHEN PRINTER READY
00C3			1400		ORC	+##21	
00C4	8D 3B 07	4*	1410	PRNT1	LDA	COL, X	
00E7	C5 24	3	1420		CHP	CH	IF COLUMN > CURSOR HORIZ
00E9	6B	4	1430		PLA		THEN USE CHAR
00EA	8D 03	2*	1440		BCS	CTLST	
00EC	4B	3	1450		PHA		
00ED	29 B0	2	1460		AND	##B0	ELSE GEN BLANK (7 LSB'S)
00EF	D9 2D	2	1470		ORA	##20	FOR TAB CATCH-UP
00F1	2C 5B FF	4	1480	CTLST	BIT	IORTS	
00F4	F0 03	2*	1490		BEQ	PRNT2	INCR COLUMN COUNT
00F6	FE 3B 07	7	1500		INC	COL, X	IF NOT A CONTROL CHAR
00F9	7D B8	2*	1510	PRNT2	BVS	DUT	TAKEN WHEN PRINTER READY
0024	CH		0041	CLRLFG		073B	COL
0036	CSWL		00F1	CTLST		0061	DEFAULT
0051	DTG		0093	DLOOP		004B	DONE1
0060	ENT0		0002	ENT1		063B	ESCHAR
009A	FINISH		068B	FLAGS		FF5B	IORTS
03BB	MODE		053B	HSTR1		0045	NEWFLG
00B3	DUT		00C1	PRNT		00E4	PRNT1
00B4	SETCH		0032	SETFLG		0021	WINDWTH
							FDFO
							COUT1
							DEV
							DONE2
							ESCTST
							MINI?
							NOVID
							PRNT2



The information contained in this manual is believed to be correct at the time of publication, but Apple Computer Inc. assumes no liability arising from the use of this material.



10260 Bandley Drive  
Cupertino, California 95014  
(408) 996-1010